

## OPERATION INSTRUCTIONS FOR SPEEDMATIC® REVOLVING DARKROOM DOORS

*IF MAINTAINED PROPERLY YOUR DARKROOM DOOR WILL LAST A LIFETIME!*

- Use caution when entering the cylinder. Please grip the inner and outer aluminum uprights to secure the door. This will avoid possible injury if the door is rotated from the other side by another person.
- After entering the door, rotate the cylinder with the inner rail.
- If the cylinder is facing the adjoining room, turn the door with the recessed finger grips.
- In the event you need to make an emergency exit, push firmly on both sides of the aluminum uprights and the door can be moved away. This applies only to Safety pop-out doors.
- The Pop-out doors are also easily removed to have greater access when moving other equipment in and out of the darkroom.
- When placing the door back in the opening, be sure to replace the neoprene light seal.

### **MAINTENANCE**

- Use a vacuum to keep the floor and the bottom metal ring free of debris.
- The door rotates freely with a center mounted thrust bearing. The inner cylinder can be raised or lowered by securing the bolt inside the door and then turning the nut on the top of the door.
- An ABS or metal door can be cleaned with a mild detergent.
- Every part for the revolving door can be purchased separately to ensure proper operation.

**ESECO-Speedmaster®**

730 E. ESECO ROAD  
CUSHING, OK 74023  
OFFICE: (918)225-1266  
FAX: (918)225-1284

[info@eseco-speedmaster.com](mailto:info@eseco-speedmaster.com)

[www.eseco-speedmaster.com](http://www.eseco-speedmaster.com)