

# TWO WAY REVOLVING DARKROOM DOOR BREAKAWAY HARDWARE INSTALLATION DETAIL

THE BREAKAWAY PACKAGE IS EASILY INSTALLED.

ONE SET OF ALUMINUM EXTRUSIONS COME MOUNTED TO THE DOOR FRAME.

THE OTHER SET OF ATTACHING ALUMINUM EXTRUSIONS ARE PRE DRILLED FOR MOUNTING ON THE WALL. THE FASTENERS NEEDED FOR INSTALLATION ARE FURNISHED.


SLIDE DOOR INTO FRAMED OPENING UNTIL MOUNTING FLANGE TOUCHES 1" X 6" WOOD FACING \*

MAKE A MARK 2" OUT FROM INSIDE OF ALUMINUM EXTRUSION ON THE DOOR. PLACE BACK EDGE OF THE LONGEST ALUMINUM EXTRUSIONS ALONG THESE MARKS. SECURE ALL THREE OF THE ALUMINUM EXTRUSIONS TO WALL. GOING AROUND THE DOOR.

WHEN ALUMINUM EXTRUSIONS ARE IN PLACE, INSERT THE 2" NEOPRENE RUBBER IN THE GROOVE CHANNEL.

TWO 4" GROOVED RUBBER STRIP SEALS ARE FURNISHED TO BE ATTACHED TO THE BOTTOM OF THE MOUNTING FLANGE. INSTALL WITH THE NOTCH TO THE INSIDE

THIS CREATES THE LIGHT SEAL AND IS THE FINISHING TRIM ON THE OUTSIDE WALL OF THE DOOR.

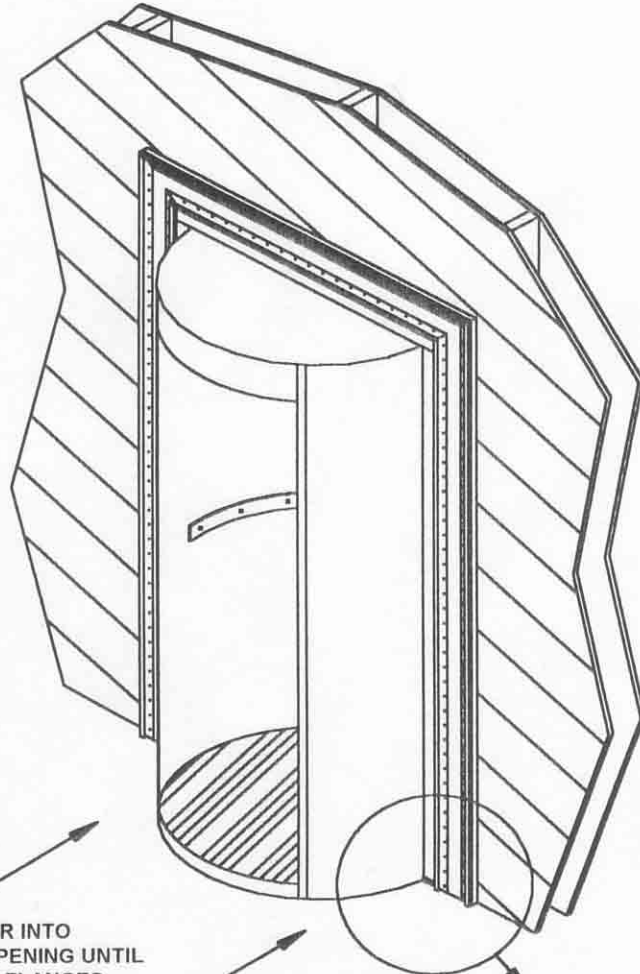

SLIDE DOOR INTO FRAMED OPENING UNTIL MOUNTING FLANGES TOUCH 1" X 6" WOOD FACING

FOR 2" NEOPRENE RUBBER INSTALLATION SEE BLOW-UP "A"

\* NOTE:  
extrusion may be mounted directly on existing masonry wall

