



www.ESECO-Speedmaster.com

ONE ESECO ROAD
 CUSHING, OKLAHOMA
 74023-9912 U.S.A.
 PHONE: 918-225-1266
 FAX: 918-225-1284


E-MAIL: info@eseco-speedmaster.com

ST-5
5-STEP TRANSMISSION DENSITY TABLET
 Cat. No. 5005 Price \$80.00

ESECO
Speedmaster
 Cushing, Oklahoma 74023
 918/225-1266

**TRANSMISSION
 DENSITY**

PART 123-2310

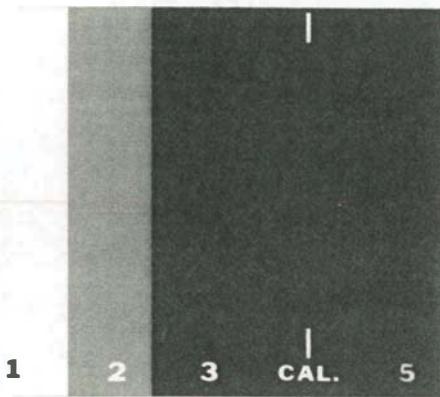

ESECO-
Speedmaster

Cushing, Oklahoma 74023
 (918) 225-1266

**ST-5
 CALIBRATED**

PART# 5005

SERIAL#		011216-1		
<u>0.10</u>	<u>0.33</u>	<u>1.54</u>	<u>3.09</u>	<u>4.01</u>
1	2	3	CAL	5

**CALIBRATION TRACEABLE TO
 U.S. NATIONAL INSTITUTE OF STANDARDS AND TECHNOLOGY**

The Density Tablet is a 4" X 2" X-Ray Film Strip divided into 5 progressive density steps. The value of the least dense step is in the range of .08 and the value of the most dense step is in the range of 4.00.

One of the more usual applications of the ST-5 is its use as a Certified Standard Reference Material for verification of the accuracy of Densitometers and associated Density Calibration Check Tablets.